

Retro-Fitting PURASAN® models PST*, PST*02 and PST*03 Cartridge (41-135) to PST*EX refillable tablet system (41-135A)

Warning



Read all safety precaution on the tablet container before handling and installing tablets.

Purasan® units manufactured after August 2012 are PST*EX systems and utilize a refillable tablet dispenser, not a prepackaged cartridge (41-135). This allows tablets to be shipped without HAZMAT classification for transportation. Units utilizing the 41-135 cartridge can be retro-fitted to this new refillable system. This kit (41-135RFK) includes: tablet holder basket with screen and a vapor lock container of tablets (41-135A).

For a complete upgrade to new controls please use part # SPC*RFK

Removing 41-135 cartridge:

1. Unscrew tablet dispenser lid in a well ventilated area (Fig. 1)
2. Using rubber gloves and eye protection remove cartridge and place in a large bucket. Use large quantity of water to dilute any left over tablets before discharging.
3. If there is any debris in the dispenser, remove dispenser and wash thoroughly with large quantities of water.

Installation:

1. Insert basket with screen into the dispenser.
2. Loading the tablets :
 - Pry open 41-135A vapor lock container lid.
 - Use rubber gloves and eye protection before handling tablets.
 - Reload with two tablets in the basket (Fig. 2)
 - Replace lid on tablet dispenser and tablet container.
3. Follow directions in Owners manual to verify water reaches line as marked on dispenser, adjust as necessary.

New Part number for replacement tablets is 41-135A

* Specify voltage

Fig. 1


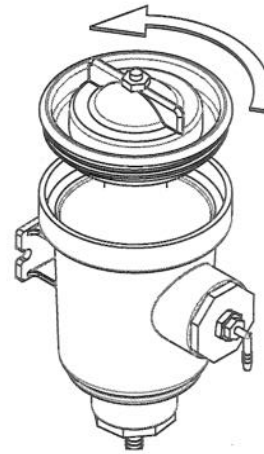


Fig. 2

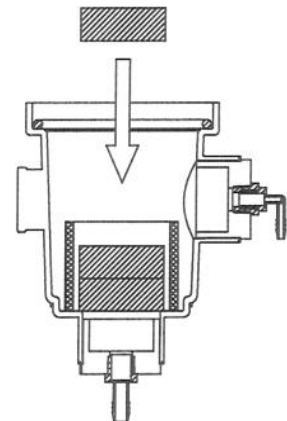

530 Orange Street, Millville, NJ 08332 USA
Telephone: 856-825-4900 FAX: 856-825-4409
Website: www.raritaneng.com
Southern Office and Plant:
3101 SW Second Avenue, Fort Lauderdale, FL 33315 USA